


INSTALLATION GUIDE

BB30 for FSA386/Rotor/Raceface 30mm – BB30386B



- ❗ Read installation guide carefully before installing your Interlock Bottom Bracket.
- 1 IMPORTANT: Apply CEMA anti seize paste on the frame, the bottom bracket and the thread.
- 2 Push in the drive side of the bottom bracket by hand as far as possible and press in completely using the CEMA 006 bottom bracket tool.
- 3 Align the threads of drive side and non-drive side and tighten by hand as far as possible. WARNING: FORCED LOCKING OF UNALIGNED THREADS WILL DAMAGE THREADS!
- 4 Use a matching tool on either side of the bottom bracket, 1 to tighten and 1 to hold. Use a torque wrench to tighten to a 40-45 Nm torque and check tightening torque every 6 months.

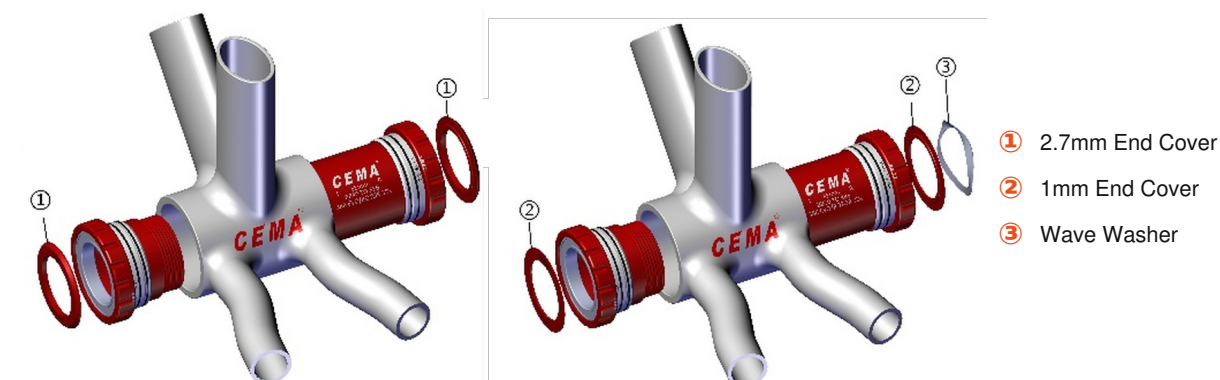

COMPATIBLE

Frame shell ID / Width (mm)			Assembling
42	68	Road ROTOR	Use ① 1pc (N-DS) & ① 1pc (DS)
	73	MTB	Use ① 1pc (N-DS) & ① 1pc (DS)
	68	Road 386	Use ② 1pc (N-DS) & ② 1pc (DS)
	73	MTB	Use ② 1pc (N-DS) & ② 1pc (DS)

- For installation of SRAM DUB cranks, add DUB accessory kit PN. SRC-BB-A0014-B.
- For installation of SRAM DUB cranks, add DUB accessory kit PN. SRC-BB-A0014-D.
- For installation of PRAXIS M30 cranks, add PRAXIS M30 accessory kit PN. SRC-BB-A0015-D.
- Install ③ according to crank manufacturer's instructions.

RECOMMENDED TOOLS

CEMA Bottom Bracket tool 30 mm **SRC-TT-B006D-18**
CEMA Bottom Bracket wrench **SRC-TT-B020**

SPARE PARTS

Spare Part bearing set for CEMA 30mm BB
SRC-BB-S010C-B Black, Ceramic
SRC-BB-S010S-B Black, Stainless Steel
SRC-BB-S010SG3-B Black, SG3 - Ceramic - COATED

MAINTENANCE

Maintain bearings by cleaning and adding lubricant:

- Every time after riding in poor road conditions or rain.
- Every 3-6 months as a routine maintenance.

Proper maintenance will increase rolling properties, avoid bearing damage and increase lifetime.

Tip! Apply CEMA water repellent paste between bearing and dustcover.