


INSTALLATION GUIDE

T47A for SRAM GXP – T47A24BR



- ! Read installation guide carefully before installing your Threaded Bottom Bracket.
- 1 IMPORTANT: Apply CEMA anti seize paste on the threads of the frame and the bottom bracket.
- 2 Align the threads of the bottom bracket and the frame and tighten by hand as far as possible. WARNING: FORCED LOCKING OF UNALIGNED THREADS WILL DAMAGE THREADS!
- 3 Use a matching tool and a torque wrench and to tighten to a 40-50 Nm torque. Check tightening torque every 6 months.
- 4 Install the protective tube and repeat steps 1-3 to install the bracket on the opposite side of the frame.

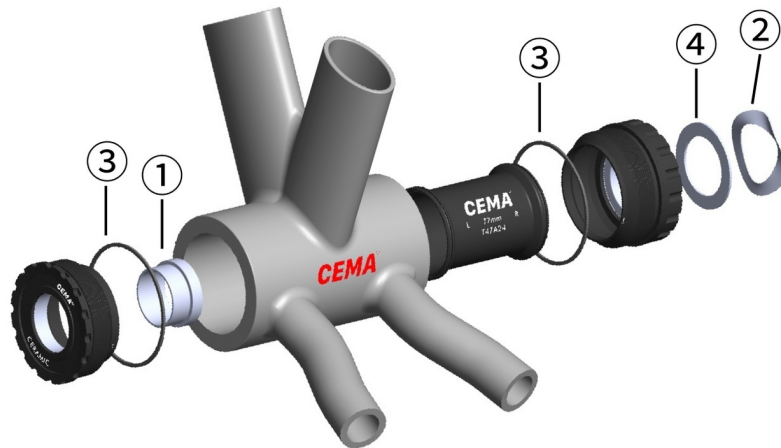

- ① GXP Adapter
- ② Wave Washer
- ③ 1mm Spacer
- ④ Adjustment Washer

COMPATIBLE

Frame shell ID / Width (mm)		Assembling	
T47	77	Road	Use ① ③ 1pc (N-DS) & ② ③ 1pc (DS)

- Use ④ only in case of excessive play between bottom bracket and crank

RECOMMENDED TOOLS

CEMA Bottom Bracket tool 30 mm **SRC-TT-B006D-18**
CEMA Bottom Bracket wrench **SRC-TT-B020**

SPARE PARTS

Spare Part bearing set for CEMA 24 mm BB
SRC-BB-S009C-B Black, Ceramic
SRC-BB-S009S-B Black, Stainless Steel
SRC-BB-S009SG3-B Black, SG3 - Ceramic - COATED

MAINTENANCE

Maintain bearings by cleaning and adding lubricant:

- Every time after riding in poor road conditions or rain.
- Every 3-6 months as a routine maintenance.

Proper maintenance will increase rolling properties, avoid bearing damage and increase lifetime.

Tip! Apply CEMA water repellent paste between bearing and dustcover.